
# Instructions for use

HOME DELUXE
WIR MACHEN DEIN ZUHAUSE

## HYLOS massage chair

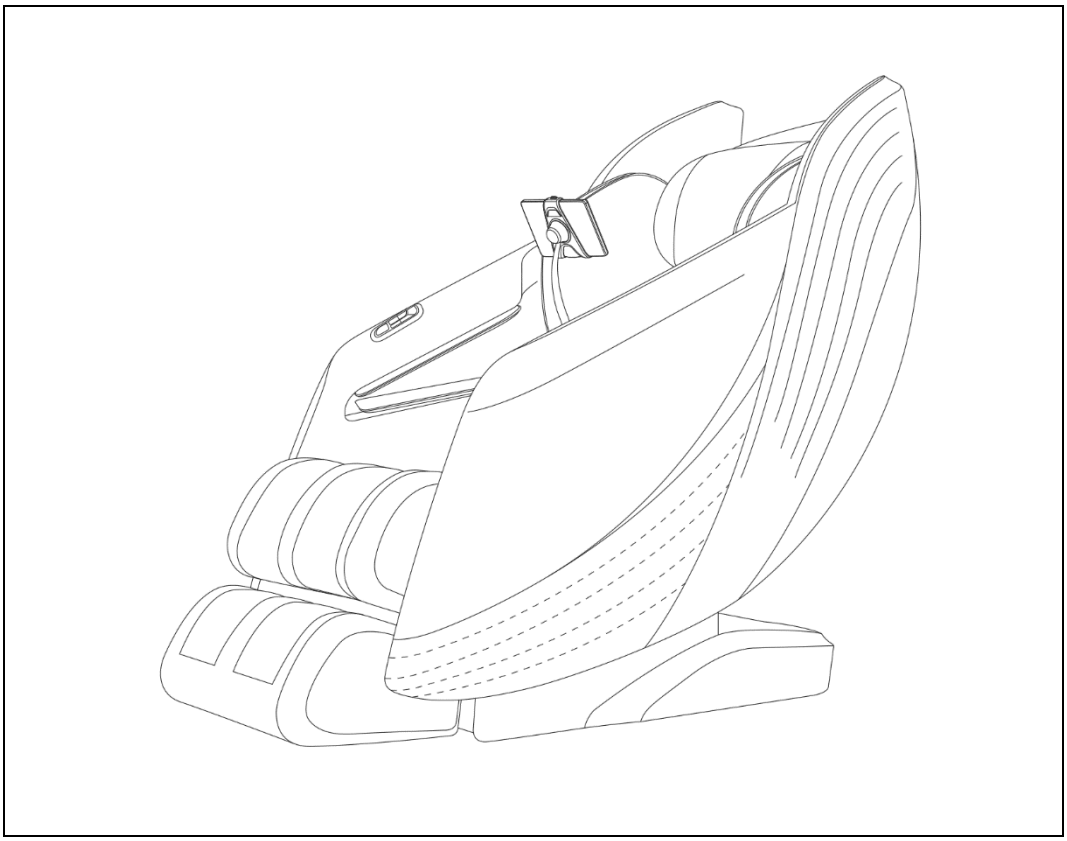

## Designed in Germany

# IMPORTANT:
# KEEP FOR FUTURE REFERENCE.
# READ CAREFULLY!

## Table of contents


1. General information ..... 3
1.1. Product overview ..... 3
1.2. General notes ..... 3
1.3. Warranty ..... 3
2. Information on the instructions for use ..... 4
2.1. Availability of the instructions for use ..... 4
2.2. Target groups of the instructions for use ..... 4
2.3. Explanation of symbols ..... 4
2.4. General information on the instructions for use ..... 5
2.5. Intended use ..... 5
2.6. General safety instructions ..... 5
3. Product features ..... 8
4. Scope of delivery ..... 9
5. Assembly ..... 9
5.1. Safety instructions ..... 9
5.2. Structure of the product ..... 11
6. Application ..... 14
6.1. Safety instructions ..... 14
6.2. Initial commissioning ..... 15
6.3. Operation ..... 15
6.4. Control elements ..... 16
7. Troubleshooting ..... 22
8. Maintenance and care ..... 23
8.1. Safety instructions ..... 23
9. Dismantling ..... 24

9.1. Safety instructions ..... 24
10. Disposal instructions ..... 24
10.1. Electrical and electronic equipment - Information for private households ..... 25

Dear customer,

Thank you for choosing a product from **Home Deluxe GmbH**. We hope you enjoy your new HYLOS massage chair.

The instructions for use support you during installation, commissioning, operation and maintenance of the product. The instructions for use and the safety instructions must be read carefully and in full. Observe these instructions to avoid danger.

# 1. General information

## 1.1. Product overview

Model: Massage chair HYLOS | Item ID: 21859, 21963

## 1.2. General notes

In order to meet our standards, we are constantly improving quality, simplifying installation and operation and adapting products to customer requirements. Due to these changes, the current version of the instructions for use can be found on our homepage.

The term "product" is used in the instructions for use for the "HYLOS massage chair".

## 1.3. Warranty

The statutory liability for defects and warranty rights apply from the date of purchase.
Home Deluxe GmbH accepts no liability for damage caused by non-compliance with the instructions for use. Complaints arising from improper installation or use are excluded from the warranty. In the event of defects in the product, please contact our customer service in writing using the contact form on our homepage, stating the product name, serial number and a photo of the type plate:

**Home Deluxe GmbH**
**Schanzeweg 2**
**32312 Lübbecke**
**Germany**
**Tel: +49 (0)5743 6181-0**
**www.home-deluxe-gmbh.de**

If you have any further questions, please contact our customer service team using the contact form.

# 2. Information on the instructions for use

## 2.1. Availability of the instructions for use

The instructions for use are part of the product and should be kept complete and in the immediate vicinity of the product.

## 2.2. Target groups of the instructions for use

The instructions for use must be read and observed by every person involved in one of the following activities or uses:

- Unpacking
- Assembly / Installation
- Commissioning / Operation
- Maintenance / inspection / care
- Troubleshooting / repair
- Waste disposal

## 2.3. Explanation of symbols

| Icon | Explanation of symbols |
|---|---|
|  | **WARNING**<br>The symbol indicates possible dangers that could result in fatal or serious injuries. Before carrying out the corresponding installation or application step, read the corresponding note. |
|  | **INFO**<br>The symbol provides important information and indicates material damage. Observe these before carrying out the corresponding installation or application step in order to understand problems and avoid damage. |
|  | **CE marking**<br>The symbol declares the conformity of the product with the applicable requirements of the European Community. The current declaration of conformity is available on request from Home Deluxe GmbH. |
|  | **Use indoors only!**<br>The symbol indicates that the smoothing brush may only be used indoors. |
|  | **Follow the instructions for use**<br>The symbol indicates that the instructions for use must be consulted. |
|  | **Disposal of electrical and electronic appliances**<br>Electrical and electronic appliances must not be disposed of with household waste! |
|  | **Alternating current**<br>The symbol indicates that the product is operated with alternating current. |

| Icon | Explanation of symbols |
|---|---|
|  | **Protection class I**<br>The symbol indicates that all conductive housing parts of the equipment must be connected to the protective conductor system of the fixed electrical installation. It is a protective earthing. In the event of a fault current, the circuit is de-energized by a fuse. |
|  | **Do not expose your hearing to loud noises for long periods of time**<br>The symbol indicates that you should avoid listening at a high volume for a long period of time in order to prevent possible hearing damage. |

## 2.4. General information on the instructions for use

The operating instructions refer to the HYLOS massage chair. It contains important information on assembly, operation, maintenance and cleaning. The instructions for use, especially the safety instructions, must be read carefully before using the product; keep the instructions for use in a safe place. Only use the product as described in these instructions for use to avoid accidental injury or damage. If you pass the HYLOS massage chair on to a third party, these instructions for use must also be handed over.

## 2.5. Intended use

The product is of high quality, durable and intended or suitable exclusively for private use to a reasonable and customary extent. Furthermore, our product is **not** intended for commercial use. Commercial use is only permitted with the written consent of Home Deluxe GmbH

The product serves as furniture for indoor use in the home. It serves as seating furniture with various electrical functions. Do not place the product in direct sunlight to prevent the cover from fading.

Only use the product as described in these instructions for use. Any other use is considered improper and may result in damage to property or personal injury. The manufacturer accepts no liability for damage caused by improper or incorrect use.

## 2.6. General safety instructions

**General hazard warnings**



- Improper handling can lead to considerable personal injury and damage to property. For this reason, assembly, installation, commissioning, troubleshooting, maintenance and repair work may only be carried out by qualified persons.
- The product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **Only** set up the product if the scope of delivery is complete and in perfect condition.
- Ensure that all parts are undamaged and correctly installed. There is a risk of injury if they are not installed correctly. Damaged parts can affect safety and function.
- Keep the power cable away from hot surfaces.
- Do not use the product in combination with other therapeutic devices or heating blankets.
- Do not use the product in an excessively damp or dusty environment.
- Do not make any changes to the product
- Check the cable connections and closures at regular intervals.
- The product is suitable for max. 1 person.

- The product may be loaded with a maximum of 120 kg.
- **Fire hazard!** Do not use the product together with a blanket or pillow.
- The product should never be left unattended. Disconnect the plug from the power supply.
- Keep long hair away from the massage during use.
- It is recommended **not to** use the massage for longer than 15 minutes.
- People with medical conditions should consult their doctor before using the massage chair.
- The product is not intended for self-treatment. It does not replace a healthcare provider.
- If your legs and feet slip off the leg rest during the massage, switch off the massage function.
- **Risk of burns!** High temperatures can occur regardless of the setting of the handset**.** Do not use the product on infants, invalids, sleeping or unconscious persons. Do not use on sensitive skin or people with poor circulation.
- Connect the product to a properly earthed power supply.
- Keep pets or children away from the product.

**Danger for children**



- Keep children away from packaging materials. Make sure that small children do not put any small parts in their mouths. There is a risk of choking!
- Keep children away from the installation site when setting up the product. The scope of delivery contains small parts that can be swallowed or cause serious injury.
- Keep children away from the product.
- **Risk of tipping over!** The product is not a children's toy. The product can fall over when loaded on one side, which can result in death.
- Children can injure themselves when playing with the product or when pulling up on the product.
- Do not place the product directly or in the immediate vicinity of a play area.
- Explain to the children how to use the product correctly and never leave them unsupervised while playing.

**Risk of injury**

**Improper handling of the product can lead to injuries**



- Check the product for visible damage before each use.
- Do not make any design changes to the product. Any modifications must be authorized in writing by the manufacturer and carried out in accordance with the instructions.
- Do not use the product if liquids have been spilled on it.
- Do not use the product if the fabric of the backrest is damaged and the inner component is exposed.
- Do not use the product under the influence of alcohol or drugs.
- If the product is damaged, it must no longer be used. Damaged parts must be repaired or replaced with original spare parts.
- If the mains cable is damaged, take the product out of operation until the mains cable has been replaced by the manufacturer, its customer service or a qualified electrician.
- Do not use the product if the padding or seat has been removed.
- If pain or discomfort occurs during the massage, stop the massage immediately and contact a doctor.
- **Danger to life due to electrical voltage**: There is an immediate danger to life if live parts are touched. Damage to the insulation or individual components can be life-threatening. -> If the insulation is damaged, switch off the power supply immediately and arrange for repairs.

## Risk of damage



- Improper handling of the product can lead to damage.
- Repair and maintenance work on the electrical system may only be carried out by a qualified electrician.
- Do not open the packaging with sharp objects (e.g. knives, scissors or similar) as this may damage the product. Be careful when opening.
- If you open the packaging carelessly with a knife or other sharp objects, the product may be damaged. Be very careful when opening.
- Do not climb onto the product as there is a risk of tipping.
- Do not use the product near sources of heat or naked flames.
- The chair must not be used at temperatures of 40°C or higher.
- Avoid permanent exposure to direct sunlight.
- Never drop objects into openings.


## Explosion hazard





**Caution:** Do not store highly flammable, combustible or explosive substances inside the product. Highly flammable substances can catch fire.


## 3. Product features

| | |
|---|---|
| **Product name** | HYLOS |
| Tension | 220 - 240 V AC |
| Frequency | 50 - 60 Hz |
| Performance | 160 W |
| Recommended service life | 15 min. |
| Seat dimensions (L x W x H) | 150 x 77 x 123 cm |
| Bed dimensions (L x W x H) | 180 x 77 x 89 cm |
| Material | Synthetic leather 100 % polyurethane |
| Weight | approx. 79 kg |
| Load capacity | Approx. 120 kg |
| Noise level | Max. 60 dB |

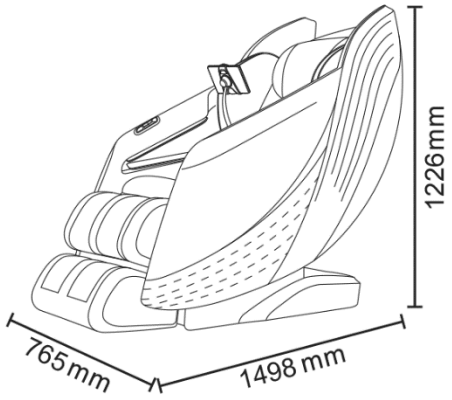


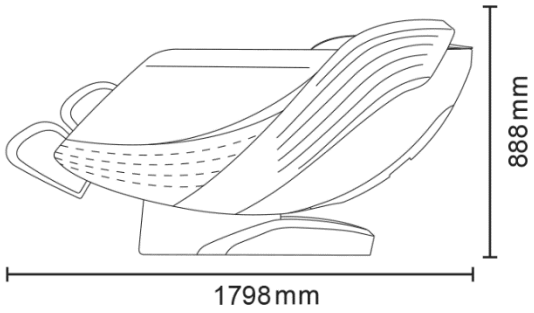


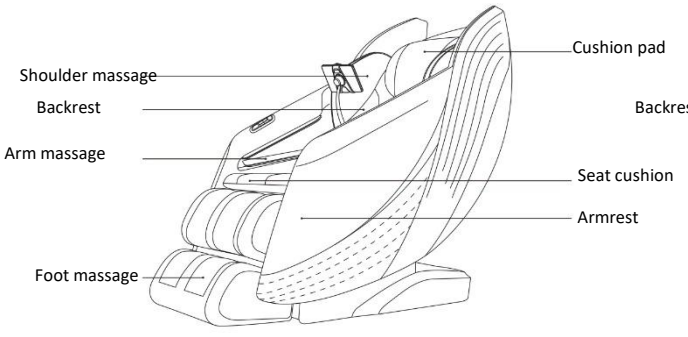
# 4. Scope of delivery

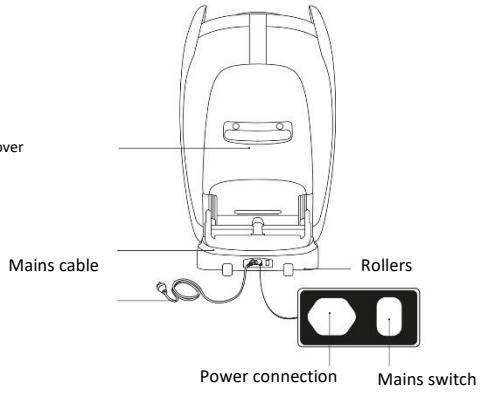Check the packaging for external damage on delivery. Furthermore, immediately after unpacking, check that the scope of delivery is complete and that the product and all components are in perfect condition. Only assemble the product if the scope of delivery is complete and undamaged.

**Components/parts**

| No. | Description | Quantity | Pictures |
|---|---|---|---|
| **1** | Massage chair | 1 |  |
| **2** | Screen | 1 |  |
| **3** | Mains cable | 1 |  |
| **4** | Allen key | 1 |  |
| **5** | Bracket | 1 |  |
| **6** | Cover | 1 |  |
| **7** | Screws | 3 |  |
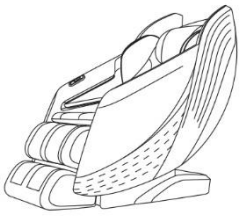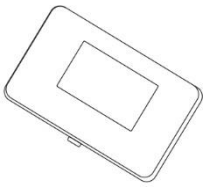
# 5. Assembly

## 5.1. Safety instructions

All health and safety information must be read.

**Risk of injury**
**Improper handling during installation can lead to injuries**




- Make sure that the package is opened at the top. Be very careful when opening with a sharp object.
- We recommend at least 2 people to unpack the product.
- **Only** set up the product if the scope of delivery is complete and in perfect condition.
- Ensure that all parts are undamaged and correctly installed. There is a risk of injury if they are not installed correctly. Damaged parts can affect safety and function.
- Operating errors, assembly errors or damage caused by assembly are excluded from the warranty.
- Only place and use the product on a level and non-slip surface.
- Do not place the product where aerosol products are used or where oxygen is administered.
- Keep children away from the assembly site while the product is being assembled. The scope of delivery contains small parts that can be swallowed or cause serious injury.
- If the mains cable is damaged, take the product out of operation until the mains cable has been replaced by the manufacturer, its customer service or a qualified electrician.
- **Danger to life due to electrical voltage**: There is an immediate danger to life if live parts are touched. Damage to the insulation or individual components can be life-threatening. -> If the insulation is damaged, switch off the power supply immediately and arrange for repairs.

## 5.2. Structure of the product

The product is delivered disassembled and can be assembled with little effort. Follow the assembly instructions carefully. If the instructions are not followed, the function and safety of the product cannot be guaranteed.


The power plug must be plugged into a grounded outlet that is properly installed in accordance with all local codes.

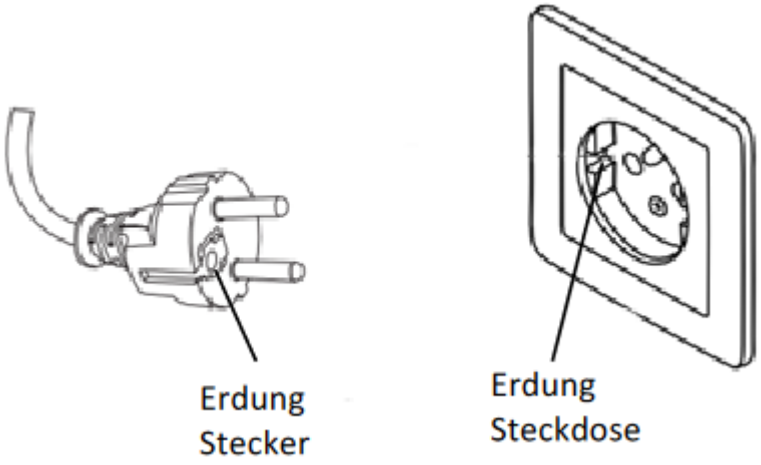



**DANGER**


Improper connection of the appliance grounding conductor can result in electric shock. Check with a qualified electrician or service person if there is any doubt that the product is properly grounded. Do not modify the plug supplied with the product - if it does not fit into the outlet, install a suitable outlet from a qualified electrician.

- The following instructions must be read carefully.
- If the width of the aisle is less than 90 cm, the product will not fit through.

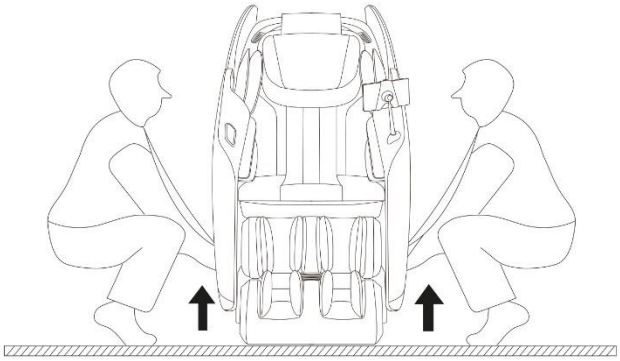
| Illustration | Build-up step |
|---|---|
|  | Lower the device slowly and take care not to injure your foot. Careless release of the massage chair can damage the floor. It is recommended to use a blanket as a support. |

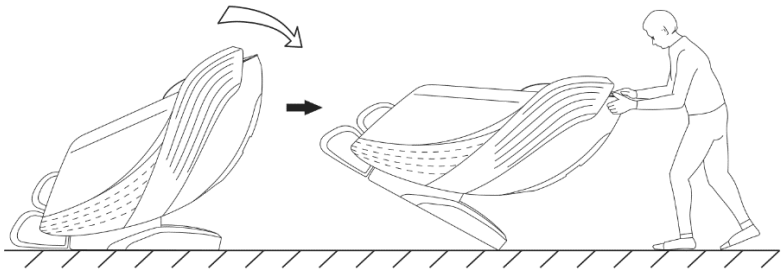

Tilt the chair onto the rear castors and move the product to the desired position.

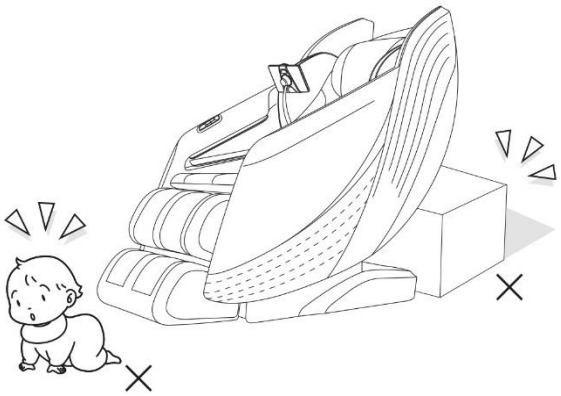


Make sure that there are no people, pets, toys or other objects near the massage chair.

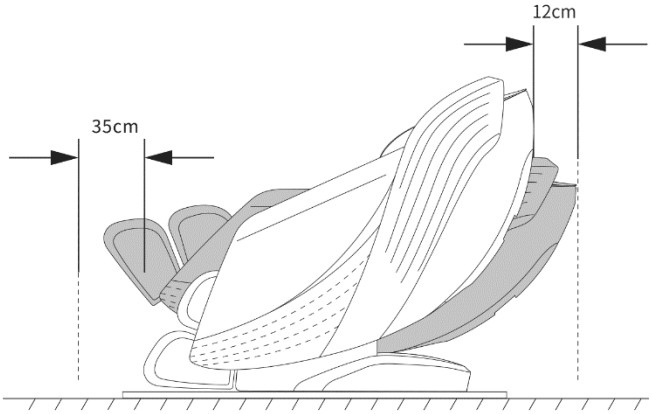



Pay attention to the distance to the rear and front.

A distance of at least 12 cm should be maintained to the rear


A distance of at least 35 cm should be maintained to the front.

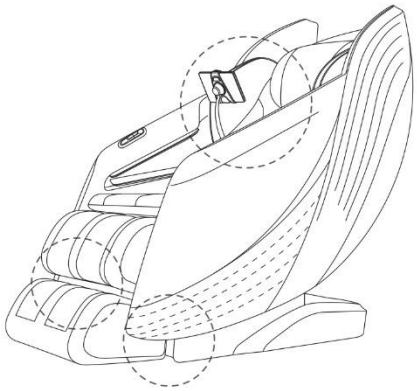


Before the massage, make sure that there are no foreign bodies in the area of the calf massage, foot massage, etc.

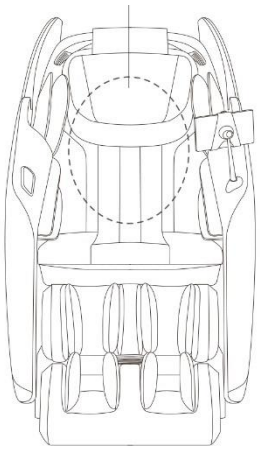


Make sure that the fabric covering the rollers of the backrest is not damaged.

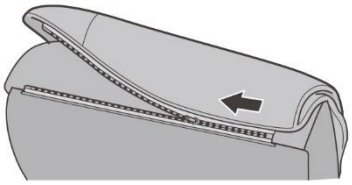

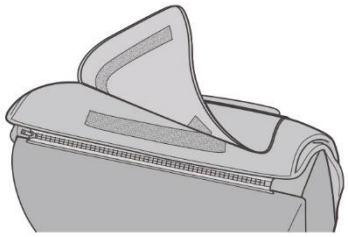



Fasten the upper back cushion and the backrest with the zipper.

Attach the back padding on both sides.

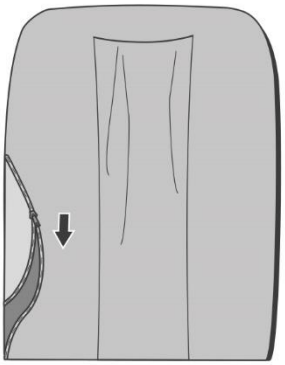


Attach the left side of the back cushion to the back-rest with the zipper, just like the other side.


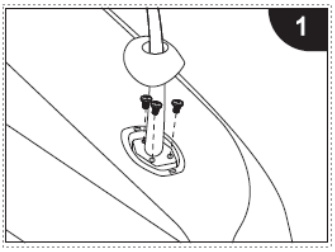


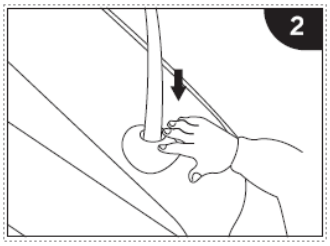
Fit the bracket (**5**) with the 3 screws (**7**) and tighten them. Then press the cover (**6**) onto it.

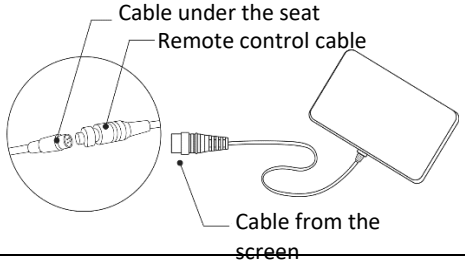


Connect all cables together as shown.

| | |
|---|---|
|  | Insert the mains plug into the socket. |
|  | Plug the mains cable into the product's connection socket and switch the product on. |

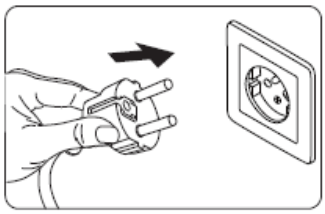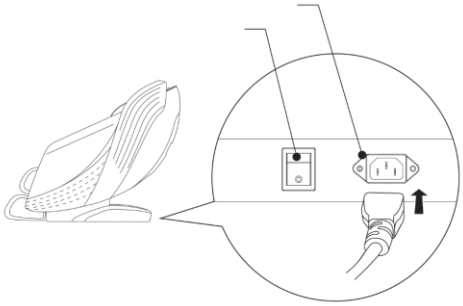Switch off the product at the back using the main switch; in addition, all buttons must be switched off before the mains plug is inserted into the power supply.

# 6. Application

## 6.1. Safety instructions

The following health and safety information must be read carefully.

**Risk of injury**
**Improper handling during operation can lead to injuries**

- Do not use a damaged product.
- Do not make any changes to the product.
- The product is not a children's toy, climbing wall or sports equipment. Children are not permitted to play with the product.
- Check all cable connections at regular intervals.
- Only use the product when seated.
- Keep the product dry and away from liquids.
- Do not use immediately after eating.
- During commissioning, the product **must** be under constant supervision.
- Keep the product clean.
- If the mains cable is damaged, take the product out of operation until the mains cable has been replaced by the manufacturer, its customer service or a qualified electrician.
- Do not remove the backrest cover. Touching the internal components can lead to electric shocks or malfunctions.
- Do not move the product when someone is sitting in it.
- Do not use the product if the socket is loose.
- Do not use the product if there is a malfunction.
- Do not use the product if your body or hands are damp or wet.
- Do not wear loose clothing, scarves, ties or jewelry during the massage function.
- **Danger of falling:** Do not stand up during the massage, the airbag function holds you in place.
- If you experience pain or discomfort during the massage, stop the massage immediately

and inform your doctor.
- Keep long hair away while using the product.
- **Danger to life due to electrical voltage**: There is an immediate danger to life if live parts are touched. Damage to the insulation or individual components can be life-threatening. -> If the insulation is damaged, switch off the power supply immediately and arrange for repairs.
- Switch off all functions and the handset before disconnecting the product from the power supply.
- Always disconnect the product from the power supply after use.
- Do not place the power cable under the massage chair or other heavy objects.
- Do not wrap the power cable around the massage chair.
- Consult a doctor before use if
  - are pregnant.
  - Recently had an operation.
  - have phlebitis or thrombosis.
  - Surgical pins, screws or anything mechanical in your body.
  - have a risk of blood clots.
  - have a spinal disease or injury.
  - have a pacemaker or other electrical medical devices.
  - have osteoporosis or sensory impairments.

## 6.2. Initial commissioning


Check the product for damage before using it for the first time. The product may only be used if it is undamaged.


## 6.3. Operation

Check before using the product,
- the proper condition.
- the electrical connection.
- all functions on the handset.
- that the chair is not in direct sunlight.
- that there is sufficient space to the front and rear. (see Fig. 1)

## 6.4. Control elements

**Control element on the product**



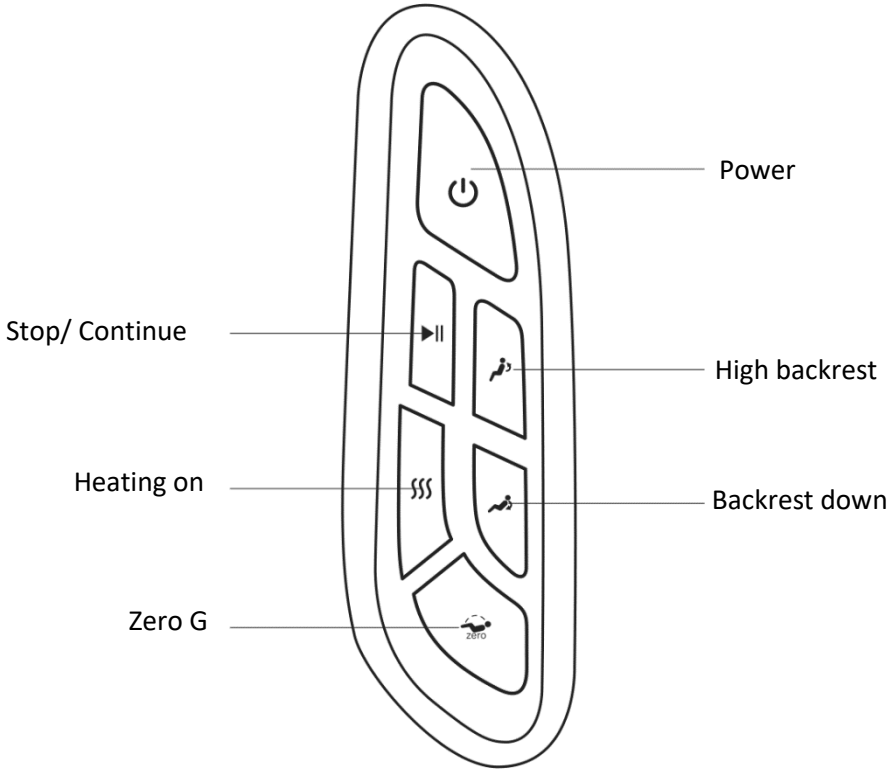


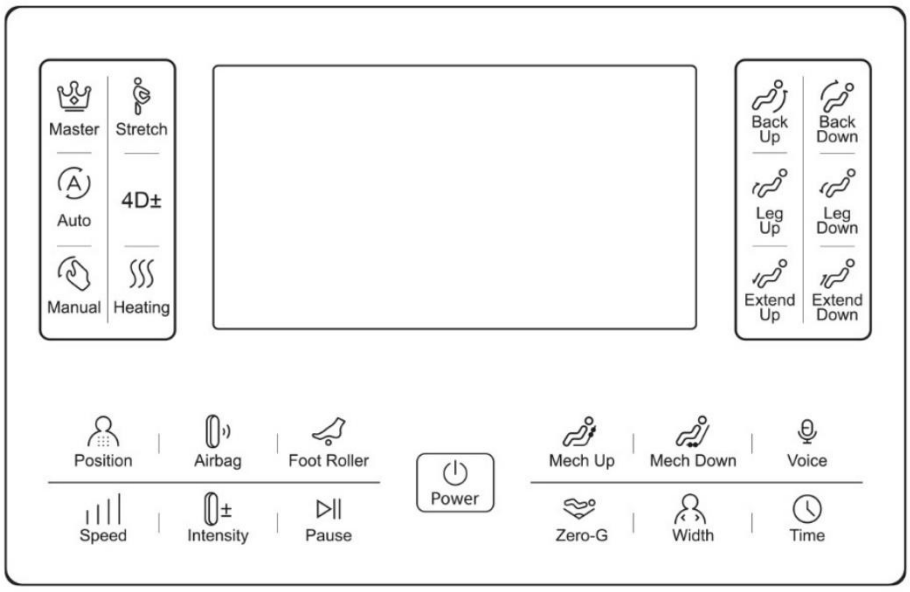




- The programs can only be switched individually.
- Each time the buttons are pressed, the LED next to them lights up.
- The LED lights up when the buttons on the handset are pressed.

**General information**


- The **airbag** and **range** settings are available in manual and automatic mode.
- The speed setting is only available in manual mode
- After switching on, the product starts with the body scan, adjusts the backrest and starts the "Relax" automatic mode.
- For the arm and leg massage, the limbs must be placed in the positions provided (side section, footrest).
- When ending the massage, press the "**Off**" button and follow the instructions on the screen.
- Only switch off the main switch when HOME DELUXE appears on the screen.

| Function | Icon | Description |
|---|---|---|
| Power |  | Press the "Power ON / OFF" button to switch the product on or off. |
| Car |  | Press the "Auto" button to switch between the automatic program functions. |
| Master |  | Press the "Stretch" button to activate stretch mode. |
| Stretching |  | Press the "Master" button to activate master mode. |
| 4D+- |  | Press the button to adjust the strength of the 4D mechanism. Each press increases the strength by one level. The levels can be set from 1-6. |
| Manual |  | Press the button to switch to manual massage. You can select different massage methods depending on your body situation. |
| Heating |  | Press the "Heating" button to switch the heating on and off. The symbol for heating is shown on the display. The symbol not shown on the display if "Heating" is deactivated. |
| Backrest up/down |  | Press the "Backrest up/backrest down" button to adjust the backrest. |
| Feet up/down |  | Press and hold the "Feet up/down" button to adjust the angle of the legrest up/down and release the button to fix the angle of the legrest. |
| Footrest up/down |  | Press the "Footrest up/footrest down" button to adjust the footrest extension |

| | | |
|---|---|---|
| | | up/down. |
| Position |  | Press the "Position" button to set the massage to a specific body area. |
| Speed |  | Press the "Speed" button to set the speed. |
| Airbag |  | Press the "Airbag" button to open the airbag menu. Use the "Change settings & OK" button to open the desired massage area and set/select the desired intensity. |
| Intensity |  | Press the "Intensity" button to set the intensity. |
| Foot rollers |  | Press the "Roll" button to switch the roller massage function on or off. |
| Break |  | Press the "Pause" button to start and stop the massage function. |
| Shoulder |  | Press the "Shoulder" button to adjust the shoulder position further up/down. In manual mode, press and hold this button to adjust the position of the mechanism up/down. |
| Zero-G |  | Press the "Zero-G" button to drive to the Zero-G position. |
| Width |  | Press the "Width" button to set the back roller width for tapping / shiatsu / tapping / rolling. |
| Volume |  | Press the "Timer" button to set the volume. |
| Timer |  | Press the "Timer" button to set the massage time. |

**Bluetooth function**

- Bluetooth is automatically started when the product is switched on.
- If Bluetooth is to be switched off, it must be deactivated in the menu (see display description).
- **Pairing:** Select the product in the Bluetooth list of the cell phone to perform the pairing. When you hear a sound, the connection is established.

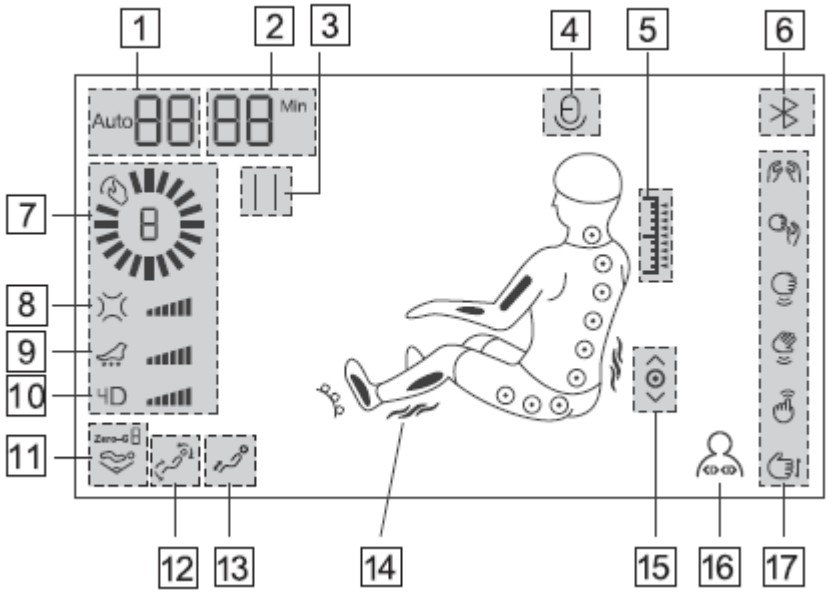


**1** Auto / manual Display range **2** Time **3** Break **4** Voice transmission

**5** Auto Body Scanning: The corresponding area flashes **6** Bluetooth speaker

**7** Speed of the back roller **8** Airbag intensity **9** Speed of the foot roller

**10** 4D intensity **11** Zero-G display range

**12** Backrest top/bottom Legrest top/bottom **13** Extension top/bottom

**14** Heater: Lights up when it is in operation
Foot roller: Lights up when it is in operation
Airbag massage: The corresponding area flashes
Back roller: The corresponding area flashes

**15** Back roller Display area: Whole body Position Local

**16** Massage width: Me- Na

**17** Massage techniques: From top to bottom: Kneading-Synchronizing-Tapping-Shiatsu-Rolling-
The selected technique flashes when it is being used.

| Function | Intensity | Description |
|---|---|---|
| Master | Medium | The body is completely massaged and the intensity of the rollers and the air cushion is more intense. |
| Relaxing | Medium | Relaxation massage the whole body is massaged and the airbags are activated. |
| Sport Care | Medium | The body is completely massaged, this program is specially designed for athletes. |
| Soft | Low | This program is intended for the elderly and children - they massage the body only lightly to reduce cramps. |
| Stretch | High | The whole body is massaged and the legs and arms are stretched. |
| Sleep | Low | Full body massage with light vibration and light intensity for the rollers. |
| Spa | Medium | All airbags are activated as well as the foot rollers to create a relaxation effect. |
| Refreshing | Medium | The body is completely massaged and the airbags and foot rollers become stronger. |
| Spine Care | Medium | The airbags are set to the middle level and the body is massaged completely to relieve shoulder and neck pain. |
| Waist & Back | Medium | Part massage with a focus on the back to reduce back pain. |
| Neck & Shoulder | High | Part massage with a focus on the neck and shoulders to reduce pain. |
| Slim | Low | Full body massage to slim the waist. |

When the massage chair is switched on or in standby mode, say "Hello massage chair" to activate the voice control.

Use the following commands to use voice control:

| **Command words** | **Answer massage chair** |
|---|---|
| Hello massage chair | Hello Master |
| Power on | Turn on massage chair |
| Power off | Turning off massage chair |
| Break massage | Massage paused |
| Continue to massage | Massage resumed |
| Turn on heating | Heating turned on |
| Turn off heating | Heating turned off |
| Back up | Ok, backrest up |
| Back down | Ok, backrest down |
| Kneading massage | Kneading massage |
| Shiatsu massage | Shiatsu massage |
| Sync massage | Sync massage |
| Knocking massage | Knocking massage |
| Rolling massage | Rolling massage |
| Clapping massage | Clapping massage |
| Master massage | Start Master massage |
| Relaxing massage | Start Relaxing massage |
| Sport Care massage | Start Sport Care massage |
| Soft massage | Start Soft massage |
| Stretch massage | Start Stretch massage |
| Sleep massage | Start Sleep massage |
| Spa massage | Start Spa massage |
| Refreshing massage | Start Refreshing massage |
| Spine care massage | Start Spine care massage |
| Waist & Back massage | Start Waist & Back massage |
| Neck & Shoulder massage | Start Neck & Shoulder massage |
| Slim massage | Start Slim massage |

**Note:**

**The commands must be rendered in English.**

## 7. Troubleshooting

If the following faults occur during operation, please check the following fault causes using the following table. If the fault cannot be rectified by the measures listed, take the product out of operation.

| Error | Possible cause | Solution |
|---|---|---|
| The product wobbles or vibrates | - The product stands on uneven surfaces<br>- The product is overloaded | - Place the product on a level surface<br>- Comply with load limits |
| Power cable or power plug are unusually hot | - Control defective | - Take product out of service, contact customer service |
| The color fades | - The product is in direct sunlight | - Place the product out of direct sunlight |
| Massage rollers no longer work | - Massage rollers defective<br><br>- Power cable not plugged in correctly | - Take product out of service, contact customer service<br>- Relieve the massage rollers<br>- Check mains cable and plug in correctly |
| Display is off | - Power cable defective<br><br>- Display defective | - Take product out of service, contact customer service<br>- Check mains cable<br>- Replace manual switch |
| Armchair does not heat up | - Heating elements defective | - Take product out of service, contact customer service<br>- Check heating, replace if necessary |
| Armchair cannot be switched on | - Power cable not plugged in correctly<br><br>- Power cable defective | - Take product out of service, contact customer service<br>- Plug in the mains plug correctly<br>- Use a new mains cable |
| Noises from the armchair | - Rollers defective | - Take product out of service, contact customer service |
| Handset does not work properly | - Manual switch defective | - Take product out of service, contact customer service<br>- Switch on the main switch<br>- Switch on the handset<br>- Replace manual switch<br>- Check the connection cable of the handset |
| Product cannot be pushed | - Rollers are blocked<br>- Rollers are dusty | - Remove objects<br>- Remove dust |

*If another problem occurs with the product, please contact us.*

# 8. Maintenance and care

## 8.1. Safety instructions

**Risk of injury**
**Improper handling during maintenance and care can lead to injuries.**



- The product may only be serviced or repaired professionally. Do not attempt to disassemble or repair the product yourself.
- **Danger to life due to electric shock!** Before and during cleaning/maintenance/care, the product must always be switched off at the main switch and the mains plug disconnected from the socket.
- **Danger to life due to electric shock!** Do not pull the mains plug out of the socket with wet or damp hands.
- **Danger to life due to electric shock!** The cover on the backrest of the product must not be removed. Touching the internal components can lead to malfunctions or an electric shock.
- Cleaning and maintenance work must **not be** carried out by children without supervision.
- Do not use any aggressive or abrasive cleaning agents such as benzene or thinner.
- The water temperature for cleaning should not exceed 40°C.

**Cleaning the massage chair**

- This can be cleaned with a slightly damp cloth, then wiped with a dry cloth or left to dry naturally.
- If the product is not used for a longer period of time, we recommend covering the product with a protective cover, for example.
- Do not wash the cover in a washing machine.
- Do not iron the cover.
- Do not dry the cover with a hair dryer or similar devices.
- As color can transfer from fabrics to the leather, care should be taken when using denim or other colored cloths to wipe the product.
- If the dirt is difficult to remove, use a melamine foam dipped in a mild detergent.



Bitte nicht verwenden



Wassertemperatur darf 40°C nicht überschreiten


Nicht Bügeln

**Cleaning the handset**

- Can be cleaned with a clean, dry cloth.

# 9. Dismantling

## 9.1. Safety instructions

**Risk of injury**
**Improper handling during disassembly can lead to injuries**



- Disconnect the product from the power supply before dismantling. Contact with live parts / components can result in electric shock, which can lead to burns or death.
- The product has a high weight and large dimensions, at least 1 strong person is required for disassembly.
- Secure the product against tipping over before dismantling.
- Switch off all functions and the handset before disconnecting the product from the power supply.

Disassembly of the product must be carried out in reverse order to assembly. (**see chapter "Assembly"**)

# 10. Disposal instructions



- Dispose of the product and all components in accordance with local and country-specific regulations to prevent damage to the environment.
- Our packaging is made from environmentally friendly materials. They can be recycled and thus serve as valuable raw materials. Dispose of the packaging material (cardboard, dirty packaging, etc.) separately and properly in accordance with the applicable national regulations.
- Contact the manufacturer if you are unsure about disposal.
- You can also obtain information on proper disposal from local waste disposal centers.

## 10.1. Electrical and electronic equipment - Information for private households

The Electrical and Electronic Equipment Act (ElektroG) contains a large number of requirements for the handling of electrical and electronic equipment. The most important ones are summarized here.

### 1. Separate collection of old appliances

Electrical and electronic appliances that have become waste are referred to as old appliances. Owners of old appliances must dispose of them separately from unsorted municipal waste. They must separate used batteries and accumulators that are not enclosed in the old appliance, as well as lamps that can be removed from the old appliance without destroying them, from the old appliance without destroying them before handing them in at a collection point. Separate old appliances in order to prepare them for reuse.

### 2. Batteries and rechargeable batteries



As a rule, owners of waste appliances must separate waste batteries and accumulators that are not enclosed by the waste appliance before handing them in at a collection point. This does not apply if the waste equipment is handed in to public waste management authorities and separated there from other waste equipment for the purpose of preparing it for reuse.

### 3. Options for returning old appliances

Owners of old appliances from private households can hand them in at the collection points of the public waste disposal authorities or at the take-back points set up by manufacturers or distributors in accordance with the Elektro G. An online list of collection and take-back points can be found on the website: https://www.stiftung-ear.de or https://www.take-e-back.de

### 4. Data protection notice

Old devices often contain sensitive personal data. This applies in particular to information and telecommunications technology devices such as computers and smartphones. In your own interest, please note that each end user is responsible for deleting the data on the old devices to be disposed of.

### 5. Take-back obligation of distributors

Distributors with a sales area for electrical and electronic equipment of at least 400 $m^2$ and food distributors with a total sales area of at least 800 $m^2$ who offer and make available electrical and electronic equipment on the market several times per calendar year or on a permanent basis are obliged to do so,

- when supplying a new electrical or electronic appliance to an end user, to take back free of charge at the place of supply or in the immediate vicinity an old appliance of the end user of the same type that essentially fulfills the same functions as the new appliance, and
- at the end user's request, to take back old appliances that do not exceed 25 cm in any external dimension free of charge in the retail store or in the immediate vicinity thereof; the take-back may not be linked to the purchase of an electrical or electronic appliance and is limited to three old appliances per type of appliance.

### 6. Meaning of the "crossed-out dustbin" symbol



The symbol of a crossed-out dustbin regularly shown on electrical and electronic appliances indicates that the appliance in question must be collected separately from unsorted municipal waste at the end of its service life.

- Manufacturer registration number
- As a manufacturer within the meaning of the ElektroG, we are registered with the responsible Stiftung Elektro-Altgeräte Register (Nordostpark 72, 90411 Nuremberg) under the following registration number: WEEE-Reg. No. DE86467979

**Home Deluxe GmbH**
**Schanzeweg 2**
**32312 Lübbecke**
**Germany**
Tel: +49 (0)5743 6181-0
www.home-deluxe-gmbh.de

GA-171-00_hylos
2024/01